



OBS.: Don't remove the wire washer.

1° Fix the support on the ceiling with the bushings and screws from the Fixing Kit contained on the package.

2° Adjust the height and fix it on the cable holder with the Allen bolts using the allen tool contained in the package.

3° Join the cables #1 and join the cables #2.

4° Install the driver with the cables as shown in the list below:

Cables #1 Connect with red Driver Cable
Cables #2 Connect with black Driver Cable

5° Install the driver on the electrical network.

6° Push the fixture against the suport until hear a clicking sound.

ML-2160 3000K 2200lm 22 7/8" x 1 x 1 1/8" (3 Stack) 120V **Power: 16W** **Weight: 3.33 lbs**

Product indicated for indoor areas.

Attention

Follow the instructions to ensure proper and safe operation. We recommend that the installation be done by a qualified professional. Recessed ceiling installation requires rigid support point attachment and special installations require special attachment.

Important

Lamps, transformers, and reactors are not included with the product except as noted. Failure to follow the instructions in the manual could result in accidents and loss of warranty. Do not adjust springs and brackets unless otherwise indicated.
 Warranty: 1 year for product and 5 years for Led and Driver.

Cleaning and Maintenance

Before any action turn off the electric current. Clean only with water dampened flannel, never use chemicals or abrasives. The materials that make up the product are non-toxic.