



Product indicated for indoor areas.

- 1° Instal the electrical network.
- 2° So fix the lamp base with the screws and bushings.
- Is not necessary to drill it.
- 3° Fit the Lamps.



Don't use incandescent lamps

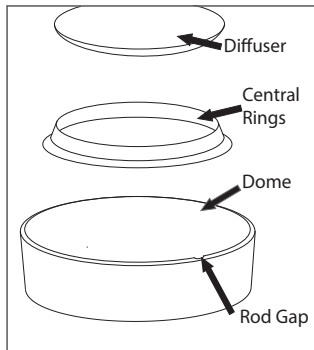

4° Fit the Central ring, so fix the Diffuser making sure it's in the right position (Fig. 01)
 Note that the Rod gap is faced to ceiling
Don't use Alcohol to clean the Diffuser.

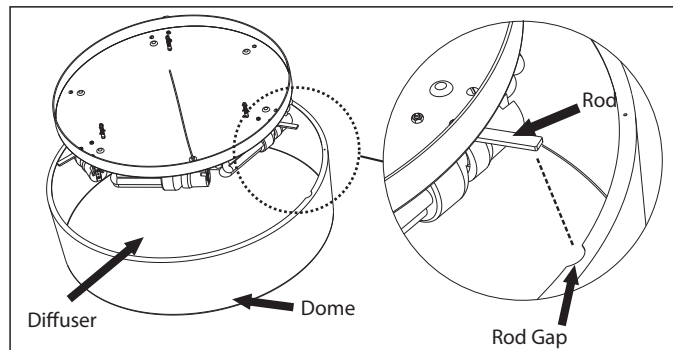

5° - Tilt the Dome and rest on two of the rods so that the third one is in the direction of the rod gap, rotate the dome making sure that it is resting on the base of lamps. If it is necessary to improve the bearing support, it is possible to adjust the position of the stem just by loosening the screws and repositioning them, never forgetting to retighten.

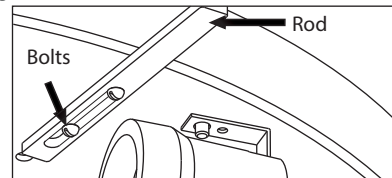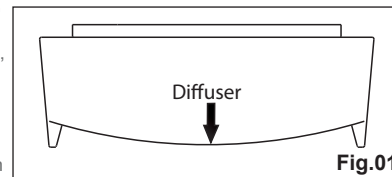

ML-2200 Ø4 1/3" x 6 1/3" 11W E26 120/277V **Power:** 11W **Weight:** 0.93 lbs
ML-2206 Ø26 7/8 x 7 1/2" 9W E26 120/277V **Power:** 9W **Weight:** 7.30 lbs

Attention

Follow the instructions to ensure proper and safe operation. We recommend that the installation be done by a qualified professional. Recessed ceiling installation requires rigid support point attachment and special installations require special attachment.

Important

Lamps, transformers, and reactors are not included with the product except as noted. Failure to follow the instructions in the manual could result in accidents and loss of warranty. Do not adjust springs and brackets unless otherwise indicated.

Warranty: 1 year for product and 5 years for Led and Driver.

Cleaning and Maintenance

Before any action turn off the electric current. Clean only with water dampened flannel, never use chemicals or abrasives. The materials that make up the product are non-toxic.